




PLATINUM ACCESS SYSTEMS, INC.

# Quick Installation Steps for BLSW814, BLSW1016, and BLSW2212 Operators

1. Please mount the operator like it shown in the concrete pad drawing (See Page 15 in manual).
2. Put the Arm on the gate like shown on page 14 in the manual
3. Make sure the operator Power A/C switch is OFF. Then connect the AC Power Source wires to the operator Power Input wires. White to White, Black to Black, and Green to Green (**Operator must be grounded to the earth to protect the operator from lightning**).
4. Now you can hook up the remote control receiver, keypad, or the other input devices to the main boards (See page 24 and 25 in manual for Keypad and radio Receiver connection).
5. Turn on the Motor Breaker & Battery Breaker. Then turn on the operator Power A/C switch. Then press RESET button once (For operator that bought before 7/2/14, It need to press the Rest button and hold it for about 3 seconds).
6. Wait for about 5 seconds. Then press OPEN, STOP, or CLOSE button on the main board, or use transmitter to help to set the Close Limit position and Open Limit position correctly.
7. Set the Sensitivity correctly (Default setting is set between 2 and 3 O'clock. See page 29 for the location of the location of the Gate SNS pot).
8. Set the TIMER to the way that you wanted (see page 29 for the location of the TIMER Pot, Max delay time is 60 seconds).
9. Set the P/S SYNC if need for Primary, and Secondary gates (See page 29 for the location of the P/S SYNC pot).
10. Once you have confirmed the limit Cam has been set correctly. Press and hold the RESET button for 3 seconds (If there this is a Master/Slave system. Then you need to reset the slave unit first. Then reset the master unit).
11. Then Press Open, or Close button once, or use the remote control to let the gate to learn again to confirm the OPEN and CLOSE limit Cam positions.( The gate should not hit anything like the wall, nor the pole when the gate is at fully open position, or at fully close position).
12. Now the gate is ready for normal operation.

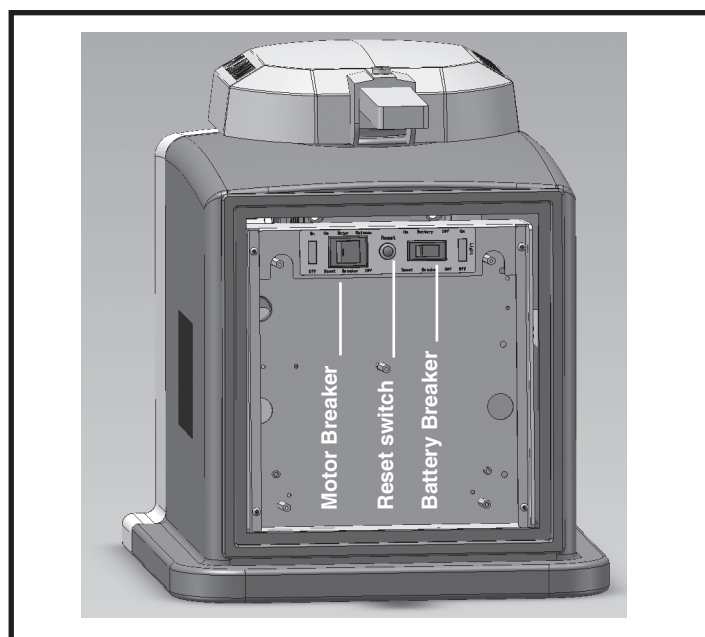

## PLATINUM ACCESS SYSTEMS, INC.

1725 E. Grevillea Court, Ontario, CA 91761 | Sales: (909) 259-6005 | Fax: (909) 923-7890 | [www.platinumasi.com](http://www.platinumasi.com)

Technical Support (909) 259-6001 | Email: [sales@platinumasi.com](mailto:sales@platinumasi.com) | [techsupport@platinumasi.com](mailto:techsupport@platinumasi.com)